

***hama***®

00055458

00055469




## **MP3-/WMA Player »DMP-200«**

00055458/55469-11.06 BC-US [www.hama.com](http://www.hama.com)

## **DMP200 MP3/WMA Player User Guide**


### **Features**

- MP3/WMA Player (MPEG 1 Layer 3)
- Support SD/MMC Card (16 MB to 2 GB)
- USB 1.1 (Windows<sup>®</sup> 2000/XP/ME/98/SE, Mac OS 9.5 +)
- One AAA Battery

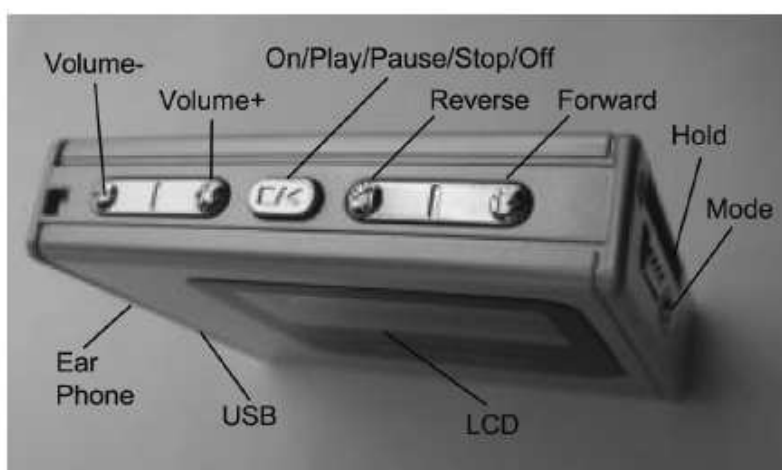

### **MP3/WMA Player Operation Buttons and Connector**

Press „**Mode**”, then press „**Volume**”, then „**Reverse**” / „**Forward**” to adjust Equalizer: „**POP**”, „**ROCK**”, „**JAZZ**”, „**CLASSIC**” or „**FLAT**”

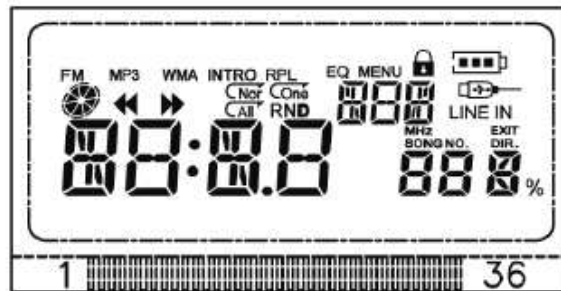

Press Mode, „**Reverse**” / „**Forward**” to adjust play mode:  
**NOR, Repeat 1, Repeat All, RND, INTRO**

**Notes:**

1. Please insert the SD/MMC card before power on.
2. Please power off before pulling the card out.
3. Please make sure the transferring completely finished before pulling the USB line out.
4. Please make sure the battery in right type.

## **Trouble Shooting:**

1. If the player cannot be power on. Please check the battery.
2. If the computer cannot detect the player, please check whether the SD/MMC card has been inserted well.
3. If the device cannot play the music. Please check whether music file in the right format (MP3/WMA). Other than MP3/WMA format files, the music file with the format not supported will be skipped.

## **Attention:**

When the battery is in low power, the battery icon will have only one bar. Please replace a fresh battery.

## **ESD Remark:**

In case of malfunction due to electrostatic discharge just reset the product (reinsert the battery and USB cord may be required to resume normal operation).



Excessive volume can damage your hearing.