

**hama**<sup>®</sup>  
COMPUTER

## Wireless Laser Mouse »M3010«



00052493/10.07 BC-US

**00052493**

# Operating Instruction

## 1. Using the mouse



1. operational



2. conversion




3. ready to transport

### Note:


Do not turn or rotate excessively (max. 180°).  
Over rotating can cause damage to the mouse.

## 2. INSERTING THE BATTERY

Press & slide open the battery door to insert the AAA batteries.

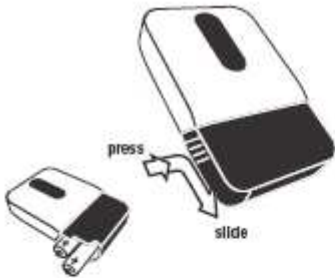

## 3. Installing the Hardware

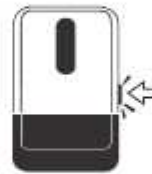


The receiver is located in the mouse. Remove as is shown in the diagram with a short counterpressure.

### Automatic connection.

Insert the receiver to a free USB-Port.  
After a few seconds, the mouse will work (automatic connection between mouse and receiver)

- Green Led on Receiver: mouse movement
- Red Led on Receiver: low battery

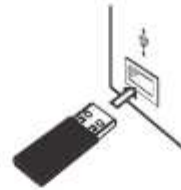

Once receiver is out, Status-LED on mouse will light up.

- GREEN light: battery good
- RED light blinking slowly: low battery
- RED light blinking rapidly: extremely low



#### 4. Software




The software allows you to assign various functions to the buttons.

Place the enclosed CD in your CD-ROM or DVD-ROM drive. Wait a moment, installation is started automatically. If it does not start automatically, click Start => Run, enter "X:\Setup" (where „X” is the drive letter of your CD-ROM drive) and press Enter to confirm.

##### 4a For horizontal scrolling

Set any button with the function "horizontal scroll" and store the settings to carry out a Horizontal scroll. Press and hold the button at the side and move your finger on the flat scroll button upwards or downwards if you have chosen e.g. the lateral button.



##### 4b For vertical scrolling

Similar to the trackpad on your notebook, use the flat scroll for vertical scrolling or push it down to activate the middle button.



#### 5. Switching the mouse on and off



Mouse off: Receiver in

Mouse on: Receiver out



Now, you're ready to go!

#### 6. Functionality problems

If the mouse does not function as expected, ensure that you have carried out the following steps:

- The batteries are new and inserted correctly
- The receiver is correctly connected to the computer.
- Receiver and devices are within their communication range (depending on location, max. 10 m)

**hama**

Hama GmbH & Co KG  
D-86651 Monheim/Germany  
[www.hama.com](http://www.hama.com)

All listed brands are trademarks of the corresponding companies. Errors and omissions excepted, and subject to technical changes. Our general terms of delivery and payment are applied.

